



COMPONENT MAINTENANCE MANUAL

TEMPERATURE SENSOR

Part Number
B7040-2

Issued by
SCIENTIFIC INSTRUMENTS, INC.
4400 W. Tiffany Drive
West Palm Beach, FL 33407
USA

Tel (561) 881-8500
Fax (561) 881-8556

21-52-07

Page T-1/T-2
Nov 08/1981
Rev 2 JAN 04/2004



SCIENTIFIC INSTRUMENTS

COMPONENT MAINTENANCE MANUAL
B7040-2

RECORD OF REVISIONS

REVISION	REVISION DATE	INSERTION		REVISION	REVISION DATE	INSERTION	
		DATE	BY			DATE	BY
1	11/10/99						
2	01/04/04						



COMPONENT MAINTENANCE MANUAL
B7040-2

RECORD OF TEMPORARY REVISIONS

TEMPORARY REVISIONS		INSERTED		DELETED	
No.	PAGE No.	DATE	BY	REVISION No.	BY



COMPONENT MAINTENANCE MANUAL
B7040-2

SERVICE BULLETIN LIST

SERVICE BULLETIN	DATE INSERTED	REV.	SUBJECT



COMPONENT MAINTENANCE MANUAL
B7040-2

LIST OF EFFECTIVE PAGES

	PAGE	DATE		PAGE	DATE
Title Page	1	JAN 04/2004	Testing and fault isolation	2	JAN 04/2004
	2	BLANK		3	
Record of revisions	1	JAN 04/2004	Disassembly	4	JAN 04/2004
	2	BLANK		4	
Record of temporary revisions	1	JAN 04/2004	Cleaning	4	JAN 04/2004
	2	BLANK		4	
Service Bulletin List	1	JAN 04/2004	Check	4	JAN 04/2004
	2	BLANK		5	
List of effective pages	1	JAN 04/2004	Repair	5	JAN 04/2004
	2	BLANK		5	
Table of Contents	1	JAN 04/2004	Assembly including storage	5	JAN 04/2004
	2	BLANK		5	
Introduction	1	JAN 04/2004	Fits and clearances	5	JAN 04/2004
	2	BLANK		5	
Description and operation	1	JAN 04/2004	Special tools, fixtures and equipment	5	JAN 04/2004
	2			5	
Specifications	1	JAN 04/2004	Illustrated parts list	5	JAN 04/2004
	2				



COMPONENT MAINTENANCE MANUAL
B7040-2

TABLE OF CONTENTS

DESCRIPTION AND OPERATION.....	1
SPECIFICATIONS.....	1
TESTING AND FAULT ISOLATION.....	2
DISASSEMBLY.....	4
CLEANING.....	4
CHECK.....	4
REPAIR.....	5
ASSEMBLY INCLUDING STORAGE.....	5
FITS AND CLEARANCES.....	5
SPECIAL TOOLS, FIXTURES, AND EQUIPMENT.....	5
ILLUSTRATED PARTS LIST.....	5



COMPONENT MAINTENANCE MANUAL
B7040-2

INTRODUCTION

This manual describes the general configuration of the Temperature, Model B7040-2, manufactured by Scientific Instruments, Inc. Identification data, including part number, serial number, and FAA-PMA data, is engraved on the body of the unit.

This manual is divided into separate sections:

Title Page	Testing and Fault Isolation
Record of Revisions	Disassembly
Record of Temporary Revisions	Cleaning
Service Bulletin Information List	Check
List of Effective Pages	Repair
Table of Contents	Assembly including Storage
Introduction	Fits and Clearances
Description and Operation	Special Tools, Fixtures, and Equipment
Specifications	Illustrated Parts List

Refer to the Table of Contents for the page location of applicable sections.

The quantities in this manual are expressed in English units followed by S.I. units in parenthesis.

This manual will be revised as necessary to reflect current information.



COMPONENT MAINTENANCE MANUAL
B7040-2

DESCRIPTION AND OPERATION

1. DESCRIPTION

The Air inlet Water Separator Temperature Sensor consists of two calibrated thermistors, which are located within a thin-wall sheath. The sheath forms a stainless steel housing as shown in figure 1. Mounting of the unit in the aircraft is accomplished via a 3/4" - 16 threaded section which mates with a threaded boss in the air duct.

2. OPERATION

The resistance of the thermistor varies inversely with the changes in ambient temperature. The thermistor is terminated at pins 1 and 2 of a 2-pin hermetically sealed receptacle, which is crimped to the housing. The receptacle provides the interface between the temperature sensor and its associated control system.

The thermistor-to-receptacle connections are as illustrated in Figure 1.

3. SPECIFICATIONS

Operating Ambient Temperature Range	-65°F to +160°F (-54°C to +71°C)
Nominal Sensor Resistance	
At 77°F (25°C)	2100 ohms
At control point, 37° F (2.8°C)	5290 ohms
Receptacle	MS27034H10B20EN (or equivalent per MIL-C-26500)
*Mating Connector	MS24266R10B20S (or equivalent)
Size:	
Probe Diameter:	0.51 in. (13.0 mm) maximum
Probe Length:	3.52 in. (89.4 mm) maximum
Overall Length	5.05 in. (128.3 mm) maximum




COMPONENT MAINTENANCE MANUAL
B7040-2

Mounting Thread 3/4 – 16 UNF- 3A

Mounting Hexagon 1.00 in. (25.4 mm) across flats

* This plug is listed for test purposes only, and is not necessarily used on the aircraft.

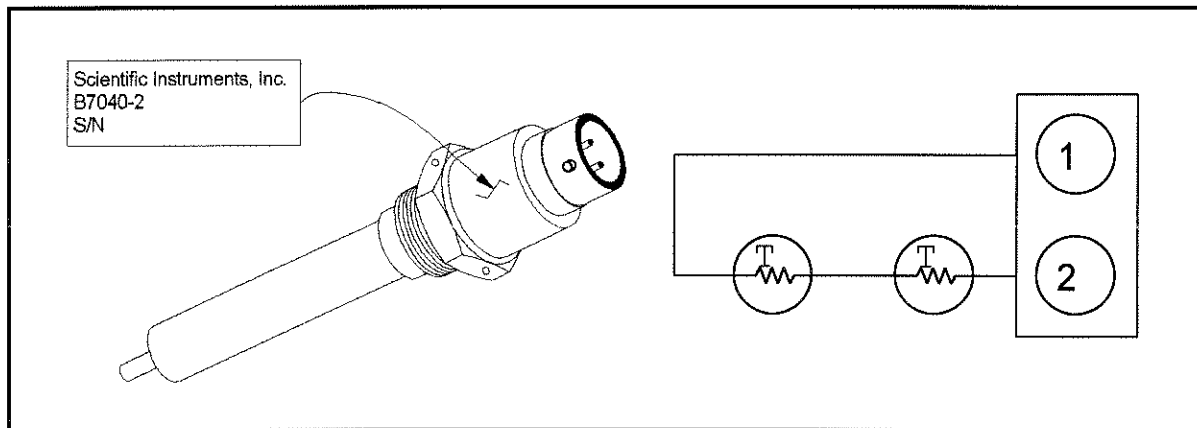

Outline and Schematic Drawing
Figure 1

TESTING AND FAULT ISOLATION

4. TESTING AND FAULT ISOLATION

A. The data that follows permits the testing of the sensor to insure correct operation.

B. Special Tools and Test Equipment

(1) A megohmmeter capable of reading 5 megohms and greater at 500 VDC (AEMC Model 1000, or equivalent)

(2) Temperature-controlled environmental test chamber. Accuracy 1%.

(3) Thermometer with temperature accuracy $\pm 0.2^{\circ}\text{F}$ ($\pm 0.11^{\circ}\text{C}$)

(4) Ohmmeter with:

Current: $<0.1 \text{ mA}$



COMPONENT MAINTENANCE MANUAL
B7040-2

Accuracy: 0.05%

Range: 0-100 K Ω

C. Visual Check


- (1) Visually check the sensor for obvious damage.

D. Insulation Resistance

- (1) Using the megohmmeter, measure the resistance between all receptacle pins and the housing. The reading should exceed 5 megohms @ 500 VDC.

E. Electrical Test (refer to Figure 2)


- (1) Connect the Ohmmeter to pins 1 & 2 of the temperature sensor. Hold the sensor at a temperature of $37^{\circ}\text{F} \pm 2^{\circ}\text{F}$ ($2.8^{\circ}\text{C} \pm 1.1^{\circ}\text{C}$), within the environmental test chamber. With the thermometer at a stable temperature and located within approximately 1/2 in. (12.7 mm) of the tip of the sensor, measure the temperature. Compare this value to that indicated on Figure 3. The value must be within the limits shown on the drawing.

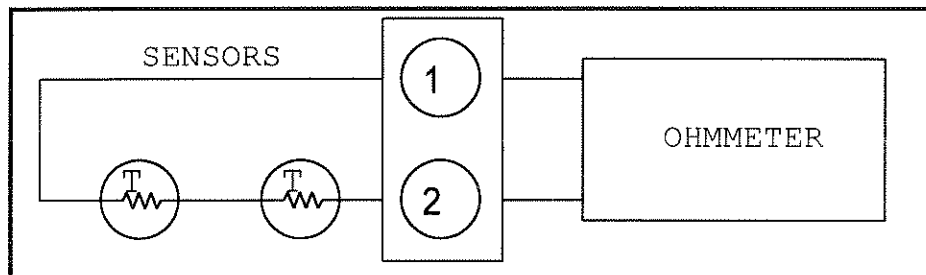

Schematic for Electrical Test.
Figure 2



COMPONENT MAINTENANCE MANUAL
B7040-2

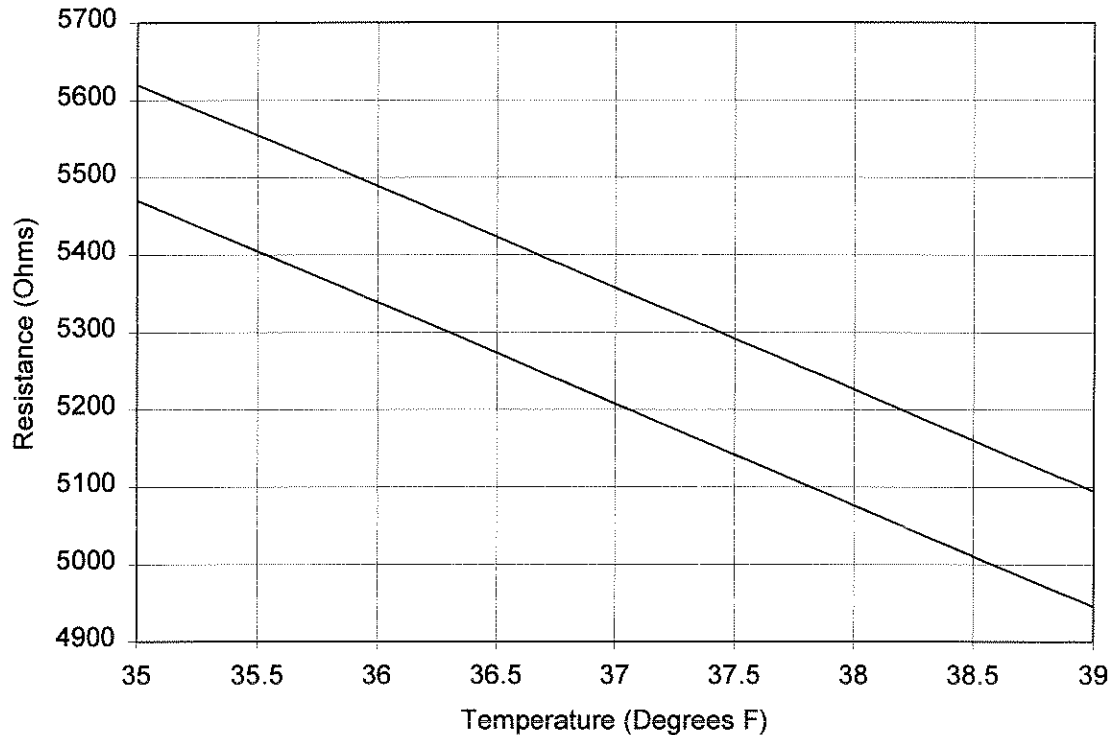

Resistance vs Temperature
Figure 3

5. DISASSEMBLY

Not Applicable

6. CLEANING

- A. Remove dirt, stains, moisture, etc. with a clean, dry, lint-free cloth.
- B. Use a soft bristle brush moistened in isopropyl alcohol to remove any foreign matter from between the receptacle pins.

7. CHECK

- A. Visually inspect the sensor probe for obvious wear or damage.
- B. Check for bent, broken or missing receptacle pins.



COMPONENT MAINTENANCE MANUAL
B7040-2

C. Check probe housing for scratches or cracks.

8. REPAIR

The temperature sensor is considered non-repairable. Bent receptacle pins may be carefully straightened. For other defects or incorrect operation, the temperature sensor should be discarded.

9. ASSEMBLY INCLUDING STORAGE

A. Assembly

(1) Not Applicable

B. Storage

(1) Install a protective cap on the electrical connector.

(2) You must keep the sensor in a clean and dry room open to the air. The temperature must be between 18°C and 28°C (64°F and 82°F) and the relative humidity between 25% and 65%.

(3) Keep the sensor in its initial packaging. If you put other containers on the sensor container, be careful to prevent damage caused by too much weight.

(4) Do not keep the sensor near heat, fluids or other sources that can cause corrosion.

10. FITS AND CLEARANCES

No dimensional check of the sensor is necessary.

11. SPECIAL TOOLS, FIXTURES AND EQUIPMENT

No other special tools are necessary.

12. ILLUSTRATED PARTS LIST

Since the unit is non-repairable, no parts list is provided.